

1. Remove the key
2. Disconnect Battery
3. Remove the screw that holds the carpet
4. Remove the carpet
5. Remove the bolt that holds the ECU
6. Remove the connector
7. Remove the ECU
8. Take photos from both sides of the ECU



0 0

