

These instructions are for cars with right hand drive (RHD), for car with left hand drive (LHD) the ECU is on the other side of the engine bay. The steps are the same for both.











